

SEALEGS QUICKSTART GUIDE

(I) START INBOARD

BATTERY ISOLATOR/S to on position

SPEED JOYSTICK to neutral

INBOARD THROTTLE to midway position

INBOARD IGNITION to first position (fan will run, leave for 4 minutes)

INBOARD IGNITION to start position (momentarily until inboard starts)

INBOARD IGNITION to choke position (momentarily while starting, if cold)

(E) STOP INBOARD

INBOARD THROTTLE to idle (for 20 seconds)

INBOARD IGNITION to off position

BATTERY ISOLATOR/S to off position



BATTERY ISOLATOR



SPEED JOYSTICK



INBOARD THROTTLE



INBOARD IGNITION

SEALEGS®

BE AMPHIBIOUS



OUTBOARD KEY



OUTBOARD CONTROLLER



OUTBOARD TRIM



BOW/STERN WHEELS



ENTERING WATER

- OUTBOARD CONTROLLER** to neutral
- OUTBOARD TRIM** to top of trim
- OUTBOARD KEY** on (once prop. is submerged, until outboard starts)
- OUTBOARD CONTROLLER** to forward
- SPEED JOYSTICK** to neutral (once craft floats)
- BOW WHEEL UP** (until buzzer sounds and leg fully retracted)
- STERN WHEELS UP** (until legs fully retracted)
- STOP INBOARD** as over page
- OUTBOARD TRIM** down to desired position



EXITING WATER

- OUTBOARD CONTROLLER** to forward (max 5 knots craft speed)
- OUTBOARD TRIM** to top of trim
- START INBOARD** as over page
- BOW WHEEL DOWN** (until buzzer sounds and wheel locks in)
- STERN WHEEL DOWN** (until buzzer sounds and wheels lock in)
- SPEED JOYSTICK** forward
- OUTBOARD CONTROLLER** to neutral position (when fully driving on land)
- OUTBOARD KEY** off (before prop. leaves water)